

Automatic Boba Cooker F-915

Version 2.2 (Sept. 2021 Release Date)



Product Number – F-915 Version 2.2 (Sept. 2021 Release Date)

Voltage– AC AC200V-240V (Single Phase / 60HZ)


Capacity – 1-3KG Boba/Hour (9L-13.5L Water)

Size – 61cm(W) x 44cm(D) x 65(H)

Weight – 17.3KG (20.5KG Shipping Weight)

Certification – CUL/UL EPH CERTIFIED

Warranty – 1 Year Manufacturer Warranty

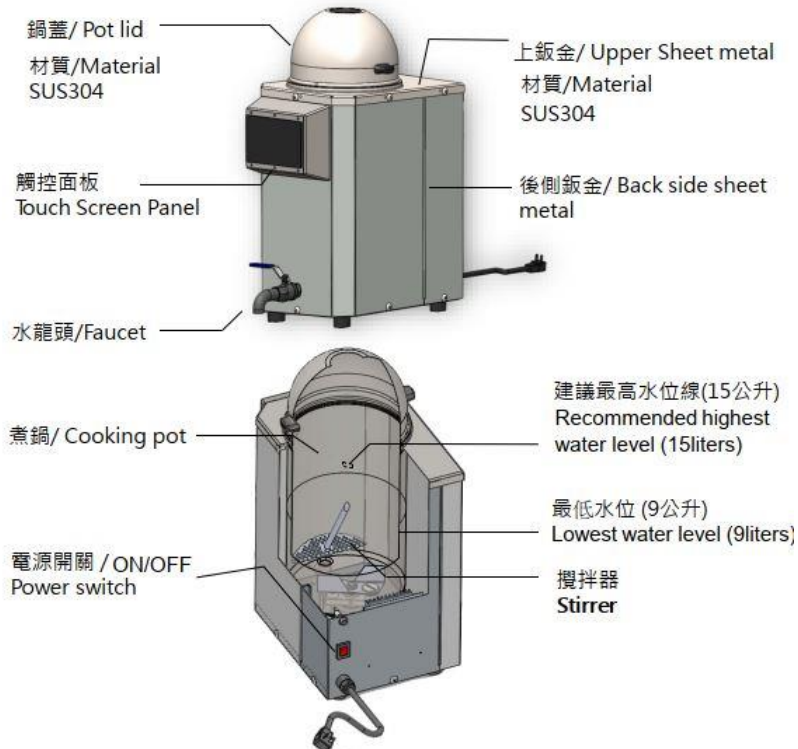



COOKING APPLIANCE
E505435



COOKING EQUIPMENT
NSF/ANSI 4
E505436

Electrical Configuration:





220v



Independent Power Outlet

****Make sure the power cable is grounded****

■ Electrical circuit configuration

- Please use 3.5 mm² wire safe current 19A
- Or use 5.5 mm² wire safe current 25A
- Caution : Do not use any extension cord

■ Distribution box wiring suggestion :

How many NFB for smart cooker 2 (capacity of fuseless switch)


- Smart Cooker / UNIT : 1PCS 20A 2 PCS 30A 3 PCS 50A

▲ Reminder :

The socket for indoor wiring is based on the voltage of the local country. If the grounding wire is not installed, in addition to the risk of electric shock, there will be serious damage to the machine.

4-1 Preparation before use

- ① Cleaning the pot.
 - ② Put in the stirrer (a magnet is at the bottom of pot to lock down stirrer position)
- ※The stirrer is assembled by step 1 to 5 in the picture.

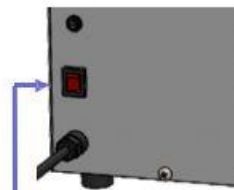


電源on開關上推
Power On push
up the switch

- ③ Pour water in (Pouring hot water saves considerable boiling time)additional water added would cause overflow


Cooking amount less than the minimum 9L may cause burnt-out and machine overheat that triggers protection mechanism.

- ④ Plug in the power plug, push “on ” switch up , the power button at control panel will flash on electricity influx.

②按鍵面板/ Front panel

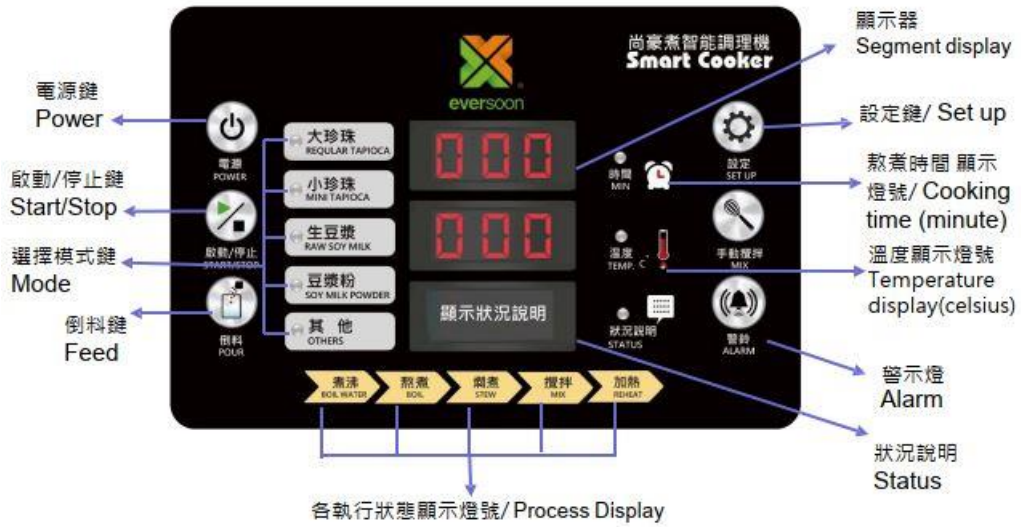

③攪拌器/ Stirrer

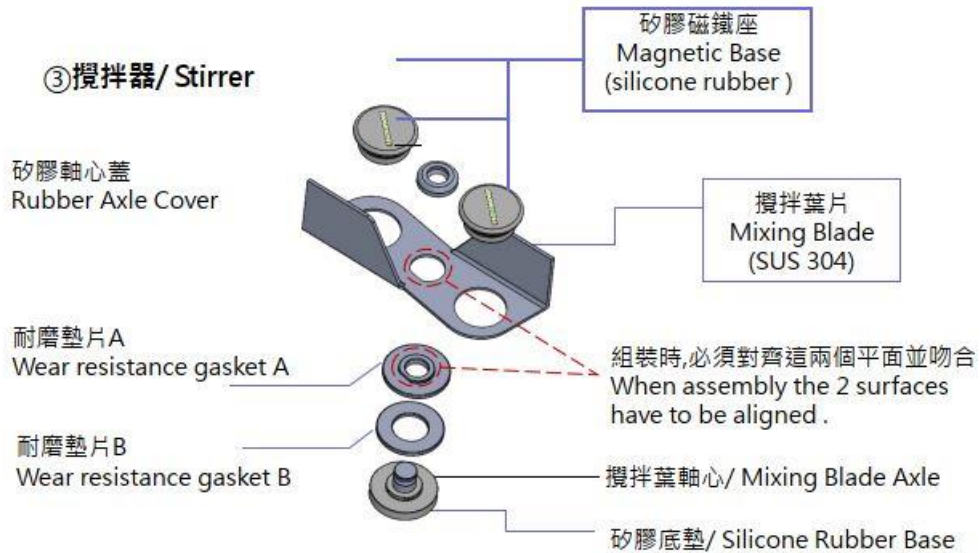

4-2 Machine operate procedure

This machine operate has ① ~ ④ steps . After the ③ steps , That is to start heating the boiled water. When heated to boiling, enter the cooking time, and finish cooking after the countdown ends. Please follow the instructions below and the right side of the drawing:

① Press the power button.

② Press the Select Mode button to select 5 modes.

③ Press start / stop button , Start cooking the pot.

After starting, press the adjustment button to set the cooking time.

If it is not set, it will be cooked according to the time of the last use.

④ When the temperature reach the boiling point, pouring notice, Pour down material button, Enter the cooking stage; after the boring stage is over, a 35 second tone will sound to indicate the end.

⑤ Pressing start/stop button the mixer would not quit operation To stop the mixer please press on power button.

PS:程式執行完成後、攪拌器仍持續攪拌、避免產生豆皮。

PS: After the program is executed, the stirrer continues to stir to avoid the production of soybean hulls.

4-3 When done operation, turn off the power

① Press the power button to power off the control panel, at this point the power button on panel still flashes.

② Push “ power on” switch upward. Power lever works only when the plug is connected to power source. .

Do not pull the plug off socket , make sure the red power off switch is pressed and a lever bounce back sound heard that puts out panel power light and avoid electricity leakage, it will be guaranteed safety.

4-3 When done operation, turn off the power

- ① Press the power button to power off the control panel, at this point the power button on panel still flashes.
- ② Push “ power on” switch upward. Power lever works only when the plug is connected to power source. .

Do not pull the plug off socket , make sure the red power off switch is pressed and a lever bounce back sound heard that puts out panel power light and avoid electricity leakage, it will be guaranteed safety.

5-1 Switch off the power

Before washing the cooker please make sure power is off Do follow the instructions below

- ① Press the power button to switch cooker off ·
- ② Press the button to cut out electricity supply ·

5-2 Cleaning

When washing cooker, please prepare your own tools: wet rag and scouring pads (for stainless steel) .

Please follow the cleaning instructions for each component

Inside the pot : Rinse the pot with clean water that lowers pot temperature and ease clean job, then wash the cooker with scouring pads.

Cooker : Use wet rag to wipe up the cooker and pod lid.

Faucet : Turn the handle counterclockwise and liquid falls out.

When loaded liquid entirely flows out , pour in water in for washing to switch off the faucet, turn to the lever in opposite way.

Pot lid : use scouring pad for stainless less used to wash.

Mixer: Please follow pictures 1. to 5. To disassemble the cooker so you can wash the mixer. When cooker cleaning done please follow the instructions (front page) to re-assemble the machine.

* Wear resistant gasket ④ ⑤ are made of ceramic · please avoid colliding.